

MICROWAVE
Owner's
Instruction Manual

LV-M34S

LV-M34G



General instructions

1. INSTRUCTIONS FOR USE

THIS MANUAL CONSTITUTES AN INTEGRAL PART OF THE APPLIANCE. IT SHOULD BE KEPT INTACT AND AT HAND FOR THE APPLIANCE'S ENTIRE LIFE CYCLE. IT IS IMPORTANT TO CAREFULLY READ THIS MANUAL AND ALL THE INSTRUCTIONS CONTAINED HEREIN BEFORE USING THE APPLIANCE. INSTALLATION MUST BE CARRIED OUT BY COMPETENT PERSONS IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE AND COMPLIES WITH THE EEC DIRECTIVES CURRENTLY IN FORCE. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTIONS: COOKING FOOD; IT IS CONSIDERED UNSUITABLE FOR ANY OTHER USE. THE MANUFACTURER CANNOT BE HELD LIABLE FOR USE OTHER THAN AS INDICATED.



DO NOT REST ANY WEIGHT OR SIT ON THE OPEN DOOR OF THE APPLIANCE.



BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.



TAKE CARE THAT NO OBJECTS ARE STUCK IN THE DOOR OF THE OVEN.



THE APPLIANCE BECOMES VERY HOT DURING USE. SUITABLE HEAT-PROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS.



DO NOT USE METALLIC SPONGES AND SHARP SCRAPERS AS THEY WILL DAMAGE THE SURFACES. USE NORMAL NON-ABRASIVE PRODUCTS, INCLUDING WOODEN OR PLASTIC UTENSILS IF NECESSARY. RINSE THOROUGHLY AND DRY USING A SOFT CLOTH OR CHAMOIS LEATHER. DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF THEY ARE ALLOWED TO SET FOR TOO LONG, THEY COULD RUIN THE ENAMEL COVERING THE INSIDE OF THE OVEN.



DO NOT USE SEALED TINS OR CONTAINERS IN THE APPLIANCE. OVERPRESSURE MAY OCCUR INSIDE THE CONTAINERS DURING COOKING, CREATING A DANGER OF EXPLOSION.



DO NOT LEAVE THE APPLIANCE UNATTENDED DURING COOKING PROCESSES WHERE FATS OR OILS COULD BE RELEASED. FATS AND OILS MAY CATCH FIRE.

General instructions

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

- WARNING: when the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated;
- WARNING: if the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
- WARNING: it is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
- WARNING: liquids and other foods must not be heated in sealed containers since they are liable to explode
- WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use;
- only use utensils that are suitable for use in microwave ovens
- when heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
- if smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
- the contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;
- eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved children being supervised not to play with the appliance. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. Children less than 8 years of age shall be kept away unless continuously supervised. Young children should be kept away.

RADIO INTERFERENCE

Microwave oven may cause interference to your radio, TV, or similar equipment.

When interference occurs, it may be eliminated or reduced by the following procedures.

- a. Clean the door and sealing surface of the oven.
- b. Place the radio, TV, etc. as far away from your microwave oven as possible.
- c. Use a properly installed antenna for your radio, TV, etc. to get a strong signal reception.

General instructions

SAFETY INSTRUCTIONS FOR GENERAL USE

Listed below are, as with all appliances, certain rules to follow and safeguards to assure top performance from this oven:

1. Always have the glass tray when operating the oven.
2. Do not use the oven for any reason other than food preparation, such as for drying clothes, paper, or any other nonfood items, or for sterilizing purposes.
3. Do not operate the oven when empty. This could damage the oven.
4. Do not use the oven cavity for any type of storage, such as papers, cookbooks, etc.
5. Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, etc without first being pierced several times with a fork.
6. Do not insert any object into the openings on the outer case.
7. Do not at any time remove parts from the oven such as the feet, coupling, screws, etc.
8. Do not cook food directly on the glass tray. Place food in/on proper cooking utensil before placing in the oven.

9. IMPORTANT-COOKWARE NOT TO USE IN YOUR MICROWAVE OVEN

Do not use metal pans or dishes with metal handles.

Do not use anything with metal trim.

Do not use paper covered wire twist-ties on plastic bags.

Do not use melamine dishes as they contain a material which will absorb microwave energy.

This may cause the dishes to crack or char and will slow down the cooking speed.

Do not use Centura Tableware. The glaze is not suitable for microwave use. Corelle Livingware

closed handle cups should not be used.

Do not cook in a container with a restricted opening, such as a pop bottle or salad oil bottle, as they may explode if heated in a microwave oven.

Do not use conventional meat or candy thermometers. There are the thermometers available specifically for microwave cooking. These may be used.

10. Microwave utensils should be used only in accordance with manufacturer's instructions.

11. Do not attempt to deep-fry foods in this oven.

12. Please remember that a microwave oven only heats the liquid in a container rather than the container itself. Therefore, even though the lid of a container is not hot to the touch when removed from the oven, please remember that the food/liquid inside will be releasing the same amount of steam and/or spitting when the lid is removed as in conventional cooking.

13. Always test the temperature of cooked food yourself especially if you are heating or cooking food/liquid for babies. It is advisable never to consume food/liquid straight from the oven but allow it to stand for a few minutes and stir food/liquid to distribute heat evenly.

14. Food containing a mixture of fat and water, e.g. stock, should stand for 30-60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent bubbling when a spoon is placed in the food/liquid or a stock cube is added.

15. When preparing/cooking food/liquid and remember that there are certain foods, e.g. Christmas puddings, jam and mincemeat, which heat up very quickly. When heating or cooking foods with a high fat or sugar content do not use plastic containers.

16. Cooking utensil may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. Potholders may be needed to handle the utensil.

17. To reduce the risk of fire in the oven cavity:

(a) Do not overcook food. Carefully attend microwave oven if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.

(b) Remove wire twist-ties from bags before placing bag in oven.

(c) If materials inside the oven should ignite, keep oven door closed, turn the oven off at the wall switch, or shut off power at the fuse or circuit breaker panel.

General instructions

2. SAFETY PRECAUTIONS

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE SAFETY REGULATIONS FOR ELECTRIC OR GAS APPLIANCES AND VENTILATION FUNCTIONS.

IN YOUR INTERESTS AND FOR YOUR SAFETY THE LAW REQUIRES THAT THE INSTALLATION AND SERVICING OF ALL ELECTRICAL APPLIANCES IS CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE.

OUR APPROVED INSTALLERS GUARANTEE A SATISFACTORY JOB.

GAS OR ELECTRICAL APPLIANCES MUST ALWAYS BE DISCONNECTED BY SUITABLY SKILLED PEOPLE.



BEFORE CONNECTING THE APPLIANCE TO THE POWER GRID, CHECK THE DATA ON THE PLATE AGAINST THE DATA FOR THE GRID ITSELF.



 
BEFORE CARRYING OUT INSTALLATION/MAINTENANCE WORK, MAKE SURE THAT THE APPLIANCE IS NOT CONNECTED TO THE POWER GRID.



THE PLUG TO BE CONNECTED TO THE POWER SUPPLY CABLE AND ITS SOCKET MUST BE OF THE SAME TYPE AND CONFORM TO THE REGULATIONS IN FORCE. THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN. NEVER DISCONNECT THE PLUG BY PULLING ON THE CABLE.




IF THE POWER SUPPLY CABLE IS DAMAGED, CONTACT THE TECHNICAL SUPPORT SERVICE IMMEDIATELY AND THEY WILL REPLACE IT.



IT IS OBLIGATORY FOR ALL ELECTRICAL EQUIPMENT TO BE EARTHED ACCORDING TO THE METHODS LAID DOWN BY SAFETY REGULATIONS.



 IMMEDIATELY AFTER INSTALLATION, CARRY OUT A BRIEF INSPECTION TEST, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE ELECTRICITY SUPPLY AND CALL THE NEAREST TECHNICAL SUPPORT CENTRE. NEVER ATTEMPT TO REPAIR THE APPLIANCE.



NEVER PUT INFLAMMABLE OBJECTS IN THE OVEN: IF IT IS SWITCHED ON BY ACCIDENT, IT MAY CAUSE A FIRE.

General instructions



DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



THIS APPLIANCE MAY NOT BE USED BY PEOPLE (INCLUDING CHILDREN) OF REDUCED PHYSICAL AND MENTAL CAPACITY, OR LACKING IN EXPERIENCE IN THE USE OF ELECTRICAL APPLIANCES, UNLESS THEY ARE SUPERVISED OR INSTRUCTED BY ADULTS RESPONSIBLE FOR THEIR SAFETY.



DO NOT LET CHILDREN GO NEAR THE APPLIANCE WHEN IT IS IN OPERATION OR PLAY WITH IT AT ANY TIME.



DO NOT INSERT POINTED METAL OBJECTS (CUTLERY OR UTENSILS) INTO THE SLITS IN THE APPLIANCE.



DO NOT USE STEAM JETS FOR CLEANING THE APPLIANCE. THE STEAM COULD REACH THE ELECTRONICS, DAMAGING THEM AND CAUSING SHORT-CIRCUITS.



DO NOT MODIFY THIS APPLIANCE.



DO NOT SPRAY ANY SPRAY PRODUCTS NEAR THE ELECTRICAL APPLIANCE WHILE IT IS IN OPERATION. DO NOT USE SPRAY PRODUCTS WHILE THE PRODUCT IS STILL HOT.



IF THE SURFACES ARE STILL VERY HOT DURING COOKING, DO NOT POUR WATER DIRECTLY ONTO THE TRAYS. THE STEAM COULD CAUSE SEVERE BURNS AND DAMAGE TO ENAMELLED SURFACES.



ALL COOKING OPERATIONS MUST TAKE PLACE WITH THE DOOR CLOSED.



The manufacturer cannot be held liable for damage to persons or things caused by failure to observe the above instructions, by interference with any part of the appliance or by the use of non-original spare parts.

Instructions for disposal

3. ENVIRONMENTAL RESPONSIBILITY

3.1 Our environmental responsibility



Pursuant to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC relating to the reduction of the use of hazardous substances in electrical and electronic appliances, as well as to the disposal of refuse, the crossed out bin symbol on the appliance indicates that at the end of the useful life of the product, it must be collected separately from other refuse. Therefore, the user must consign the product that has reached the end of its working life to the appropriate selective collection centres for electrical and electronic refuse, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. Adequate differentiated collection for the subsequent forwarding of the decommissioned product to recycling, processing and ecologically compatible disposal contributes to avoiding possible negative effects on the environment and on health, and promotes recycling of the appliance's constituent materials. Illicit disposal of the product by the user will lead to the application of administrative sanctions.

The product does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

3.2 Your environmental responsibility

Our product's packing is made of non-polluting materials, which are therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations.



Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags.

Your old appliance also needs to be disposed of correctly.

Important: hand over your appliance to the local agency authorised for the collection of electrical appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials.

Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power grid, removing it along with the plug.

Product Tech. Data

Model NO.:	LVM34S
Power:	220V~50Hz
Grill Heater:	1500W
Microwave Power output:	1000W
Capacity:	
Product Size:	595mm(W)X475m(D)X455mm(H)
Cavity Size:	420mm(W)X395mm(D)X210mm(H)
Weight:	35KG OVEN

USING THE

Before using the appliance

Remove any labels (apart from the technical data plate) from trays, dripping pans and the cooking compartment.

Remove any protective film from the outside or inside of the appliance, including from accessories such as trays, dripping pans, the pizza plate or the base cover.



Before using the appliance for the first time, remove all accessories from the oven compartment and wash them as indicated in CLEANING AND MAINTENANCE.

Heat the empty appliance to the maximum temperature in order to remove any manufacturing residues which could affect the food with unpleasant odours.

 
Make sure a Min. 5CM distance from Oven to surrounding objects when use the Oven.

Instructions for the user



4. GET TO KNOW YOUR MWO OVEN

4.1 Control Panel/Button Define

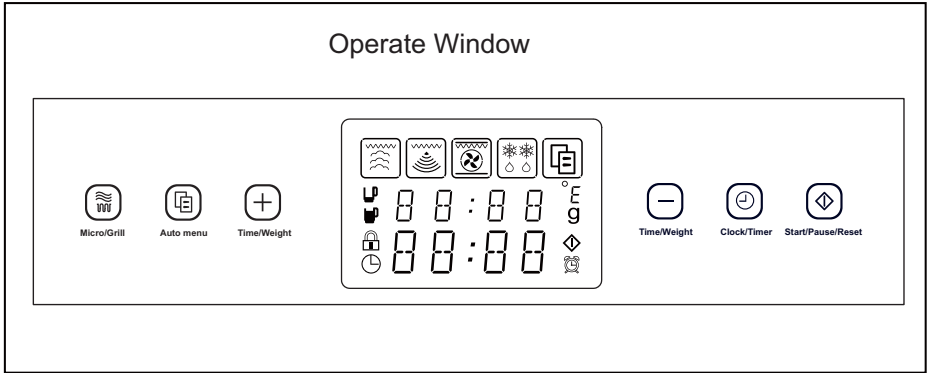

Microwave Icon



Grill Icon



Combi-Icon



Defrost Icon



Auto Manual Icon



Clock Icon



Start Icon



Clock Alarm Icon



Child Lock Icon



Weight Icon

 


Temperature Icon


Instructions for the user



4.2 Structure diagram

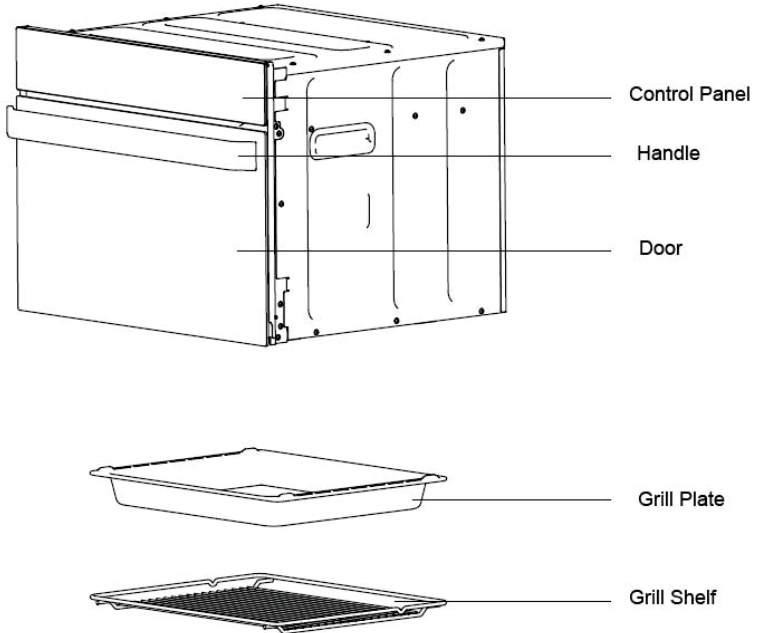

 4.3 Screen display rules

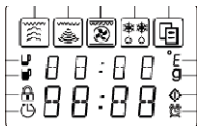

When Microwave Oven power on, the display screen begin demo. and icons on screen begin flashing from left to right/top to bottom in 2Hz frequency.

When selected any function, if the function not start the icon will flash in 2Hz frequency, until function starts the icon keeps lighting.

Under the situation of demo., standby, setting process or cooking ended, if do not push any button within 3minutes, the display screen will back to standby situation with LCD back light off. Press any button to wake up the LCD light.

During the cooking process, the LCD back light keeps lighting.



5. USING THE OVEN

5.1 Description On functions

5.2.1 Setting Cooking time

Input cooking time/weight : use time/weight +, or time/weight - to setting cooking time.

0-3 minutes: every push for 10S



3-10minutes: every push for 30S

10-30minutes: every push for 1minute

30-60 minutes: every push for 2 minutes.

Press time+ or time- for 1.5S, the setting automatically add or reduce.

5.2.2 Clock Function

Under standby situation, press clock/timer button the hour bit begin flashing,  flashing; press time/weight + or time/weight - to setting hour bit, and then press clock/timer button, hour bit setting ok; To begin setting minute bit, press time/weight + or time/weight - to setting minute bit, then press clock/timer button to finish time setting.  keeps lighting, “.” flashing.



After clock setting ok, you can change the setting with the same steps above.

Change the clock,  light,  flashing.

Clock setting is 24 Hours.

During Working situation, it is allowed to check clock/timer.



5.2.3 Clock/timer Alarm Function

Under the situation of time setted ok, press clock/timer button, and time/weight +/- button to setting hour bit; then push clock/timer and time/weight +/- to setting minute bit; Finally press “start/pause/reset” button,  and  lighting, and setting OK.

When setted clock/timer starts, the clock beeps for 10 times.

5.2.4 Cooking reservation(Clock setted)

Under the situation of time setted ok, press clock/timer button, and “time/weight +/-” to setting hour; Press “clock/timer”, and then “time/weight +/-” to setting minute bit; According actual situation to setting cooking type(fire power, time). Press start the reservated cooking is begin, reservated time begin to cook when beep twice.(Reserve of MicroWave, Grill, Combi-function and auto manual), During setting process,

 flashing. After setting ok,  keeps lighting.









5. USING THE OVEN

5.1 Description On functions

5.2.5 Microwave Function

a. Manual Microwave Cooking

Microwave power====>>Cooking Time input====>>Start






Push  button to display “ P100”, “” flashing, and microwave fire setting as P100. And then press  button, press “P70, P50, P30,P10, dEF, G-1, G-2, C-1, C-2, P100” for cycle display. And select suitable fire. Use the “time/weight +/-” to setting cooking time.  begin flashing, press start/pause/reset,  keeps lighting, and  turn off, cooking begin.

Cooking time of Max is 60 minutes, Microwave power have 5 settings, and it's P100, P70、 P50、 P30 and P10 from high to low power.

b. Quick Cooking





Under standby, press “start/pause/reset” for P100 Microwave fire, and time is 1 minutes for quick cooking. Herein press “start/pause/reset” to back to standby situation. Under standby, press “time/weight +/-” to input cooking time, and microwave icon begin flashing, press “start/pause/reset”, microwave begin cooking with P100 power, and microwave icon keeps lighting.

5.2.6 Auto Weight Defrost

Under standby situation, press “” button to display “dEF”,  icon flashing, press “time/weight +/-” to input cooking weight, “g” “” begin flashing, press “start/pause/reset” to begin work,  keeps lighting, 、“g” turn off.

Max defrost weight: 2000g, Each step is 100g.

5.2.7 Grill Function

a. Press  button, until it shows “G-1”, the grill icon begin flashing, and then press  button the display shows “G-2”, input cooking time, the “” begin flashing, press “start/pause/reset” to begin cooking, a grill icon keeps lighting,  turn off.

Grill power have 2 settings, and it's G-1 and G-2 from high to low power.

b. Under grill function, when grill time passed half, it beeps 2 times and remind the user to turning cooking food, and cooking pause; after user turning food and close the oven door, pause for 1 min. and then continue working. Or after turning food, the user can press “start/pause/reset” button to begin cooking.




c. Check clock time, 3S display.

d. when cooking time above 10 minutes, before cooking time passed half and the last 1 minutes, the grill not working.








5. USING THE OVEN

5.2.8 Combi- Function

- a. press  button until display C-1, and combi icon begin flashing, then press  button to display C-2, input cooking time, press "start/pause/reset" to begin cooking, and combi icon keeps lighting,  turn off. Combi power have 2 settings,taking the reference of microwave power.It" s C-1 and C-2 from high to low power.
- b. Check clock time, 3S display.
- c. if cooking time above 10 minutes, the last 30S microwave or grill not working.

5.2.9 Auto Menu Function

- a. Auto menu including: auto reheat , rice, vegetable,meat, fish, chicken.
- b. Under standby, press  button,  flashing, display "A-1" and then press to display"A-2",input cooking weight,  flashing, press "start/pause/reset" begin cooking,  keeps lighting,  turn off.




Menu type : A-1 AUTO REHEAT; A-2 RICE; A-3 VEGETABLE;
A-4 MEAT; A-5 FISH; A-6 CHICKEN;

Menu cooking time:(weight:g)

A-1 (AUTO REHEAT)	A-2 (RICE)	A-3 (VEGETABLE)	A-4 (MEAT)	A-5 (FISH)	A-6 (CHICKEN)
weight	weight	weight	weight	weight	weight
100	100	100	200	200	200
200	200	200	300	300	400
300	300	300	400	400	600
400	400	400	500	500	800
500	500	500	600	600	1000
600	600	600	800	800	1200
800	800	800	1000	1000	1400
1000	1000	1000	1200	1200	1600
1200			1400	1400	1800
			1600	1600	2000
			1800		
			2000		



6. Child Safty Lock

Under Oven Standby situation, press “time/weight +” and “time/weight -” at the same time 2s,  keeps lighting, and then all buttons are invalid for functions. It can avoid the hurt to child if miss pressed. Press “time/weight +” and “time/weight -” at the same time for 2s,  flash off, the child lock dismissed,  flash off and back to standby situation.

7. Pause/Cancel function

- a. Under door open, press “start/pause/reset” to cancel cooking and back to standby situation.
- b. Under door close:
 1. after setting model ok, press “start/pause/reset” to begin cooking.
 2. When cooking paused, press “start/pause/reset” to continuous cooking.
 3. while in pause, press and hold on 3s on key “start/pause/reset” to standby.
 4. While in cooking, press the key “start/pause/reset” to pause.
 5. At setting situation, press “start/pause/reset” to back to standby situation

8. Other

- a. When the microwave under the P100 firepower, cooking time is more than 30 minutes, after 30 minutes, microwave power switch for P70.
- b. The cooling requirements
After All functions finish, the cooling fan should continue to work for one minute.

The oven door switch
- c. Open the oven door during the process of cooking and the furnace lights turned on, work is suspended, display the current operation state, and then shut the oven door, furnace lights went out, press the start key to continue working procedures. In standby mode, the furnace lights turned on when open the oven door. In door open state, press the start key is invalid. Under the oven door open for any operation other than the start operation.
- d. The buzzer
Effective keystrokes ring once, turning beeping twice, end ring five times.



9 . CLEANING AND MAINTENANCE



NEVER USE A STEAM JET FOR CLEANING THE APPLIANCE.

Cleaning stainless steel

To keep stainless steel in good condition it should be cleaned regularly after use. Let it cool first.

Cleaning the glass of the lid To keep the glass surfaces in good condition they should be cleaned regularly after every use of the oven . Let it cool first.

Ordinary daily cleaning

To clean and preserve the surfaces, always use only specific products that do not contain abrasives or chlorine-based acids.

How to use: pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft rag or microfibre cloth.



Food stains or residues

Do not use steel sponges or sharp scrapers as they will damage the surface.

Use normal non-abrasive products and a wooden or plastic tool if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.



Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll; remove stubborn dirt with a damp sponge and an ordinary detergent.

Do not use abrasive or corrosive cleaners for cleaning the door glazing. (e.g. powder products, oven-cleaner sprays, stain removers and metal scouring pads).

Do not use rough or abrasive materials or sharp metal scrapers to clean the oven's glass doors since they may scratch the surface.

Cleaning the inside of the oven

For the best oven upkeep, clean it regularly after having allowed it to cool.

- Take out all removable parts.
- Clean the oven racks with hot water and non-abrasive detergent. Rinse and dry.

Instructions for the user



CARE OF YOUR MICROWAVE OVEN

1. Turn the oven off and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Do not allow the Control Panel to become wet. Clean with a soft, damp cloth, Do not use detergents, abrasives or spray-on cleaners on the control Panel.
5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates malfunction of the unit.
6. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
7. The roller ring and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent, water or window cleaner and dry. The roller ring may be washed in mild sudsy water or dish washer. Cooking vapour collect during repeated use but in no way affect the bottom surface or roller ring wheels. When removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.
8. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl. Microwave for 5 minutes, wipe thoroughly and dry with a soft cloth.
9. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

Instructions for the user



10 . INSTALLING THE APPLIANCE

 


Never use the oven door to lever the oven into place when fitting. Avoid exerting too much pressure on the oven door when open.


We recommend installing the oven with the help of a second person.

The oven is designed for mounting into any piece of furniture as long as it is heatresistant.

The adjacent figure shows the general dimensions of the appliance.

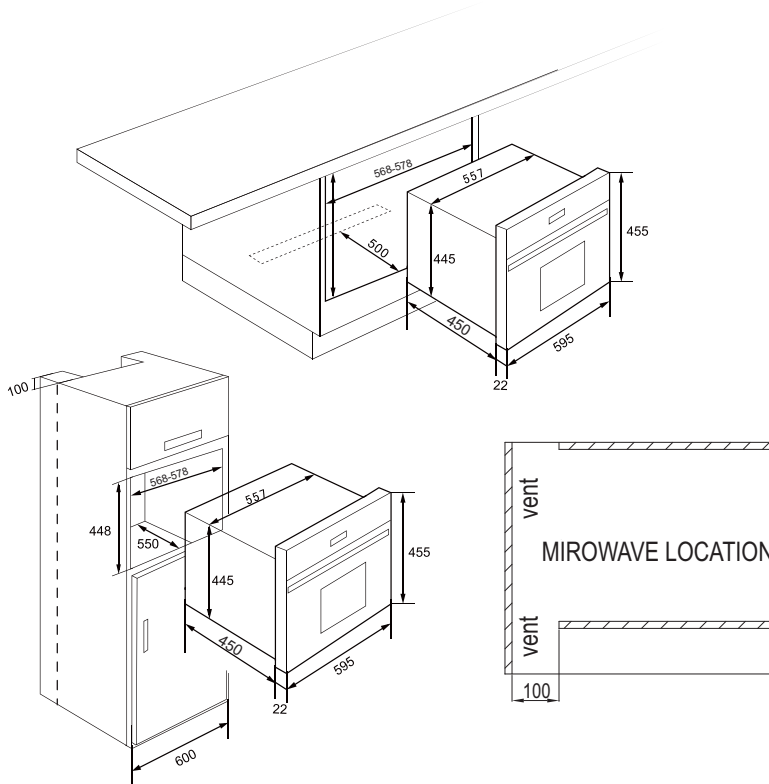

Instructions for the installer

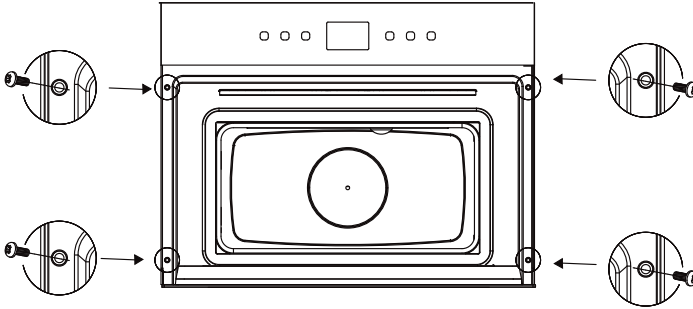 

Open the oven door, and fix the oven to intergrated kitchen with 4 selfscrew. as above diagram.

